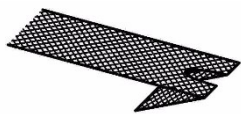 
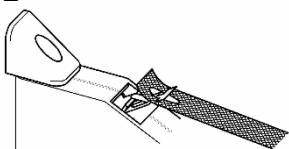
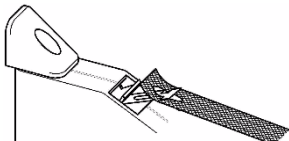
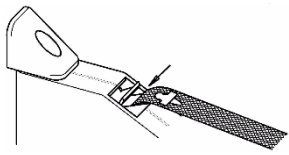
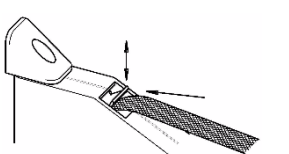


SIRAL mini-strapcoiler

Installation instruction:

	Attention • Do not open the case! • Spring ends do not pull out by force! • Only use straps from 11 to 15 mm wide and 1,2 to 1,4 mm thick. • Do not use a curved (convex) or too rigid strap. Screw the coiler to the frame or to the wall. Cut the strap the way, when the roller shutter is down, at least 10 cm of strap
1 	Make a hole in the strap approx. 15 mm from the end (do not only insert a slot, otherwise the belt will rub in the coiler).
2 	Insert the strap into the cut of the spring that way the end of the strap lies on the spring.
3 	Only then pull out the spring end with the strap and hang up the locking tab. Be careful the spring is under tension - risk of injury!
4 	Slide the strap ends under the lever into the coiler.
5 	Push down the lever, push the strap into the coiler (moving the lever up and down until the spring pulls the strap into the coiler).

To unhook the strap, push the lever down and pull out the strap at the same time, first attach the locking tab in the lever, then remove the strap.

When using a strap longer than the max. series length of 5.5m, the strap cannot be allowed to snap back into the box unchecked or the excess length pushed in.



Rolladen- und Sicherheitssysteme GmbH, Hundsberger Str. 21, 73642 Welzheim, Germany, www.siral.de, info@siral.de, T +49 7182 9277 0, F +49 7182 9277 55