

SIRAL mini-strapcoilers



Installation instruction:

	<p>Attention</p> <ul style="list-style-type: none"> • Do not open the case! • Spring ends do not pull out by force! • Only use straps from 11 to 15 mm wide and 1,2 to 1,4 mm thick. • Do not use a curved (convex) or too rigid strap. <p>Screw the coiler to the frame or to the wall.</p> <p>Cut the strap the way, when the roller shutter is down, at least 10 cm of strap</p>
--	---

<p>1</p>	<p>Make a hole in the strap approx. 15 mm from the end (do not only insert a slot, otherwise the belt will rub in the coiler).</p>
<p>2</p>	<p>Insert the strap into the cut of the spring that way the end of the strap lies on the spring.</p>
<p>3</p>	<p>Only then pull out the spring end with the strap and hang up the locking tab.</p> <p>Be careful the spring is under tension - risk of injury!</p>
<p>4</p>	<p>Slide the strap ends under the lever into the coiler.</p>
<p>5</p>	<p>Push down the lever, push the strap into the coiler (moving the lever up and down until the spring pulls the strap into the coiler).</p>

To unhook the strap, push the lever down and pull out the strap at the same time, first attach the locking tab in the lever, then remove the strap.